


# ELVTR01

Elevator CPU Holder

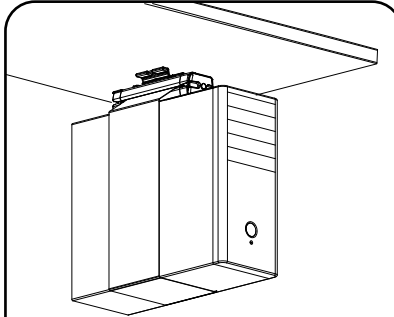

## Required Tools:

Phillips Screw


Driver

Contents:


QTY	Name
1	CPU Holder
8	#8 X 3/4 screw

## To secure CPU Holder to surface:

Remove Plastic covers.

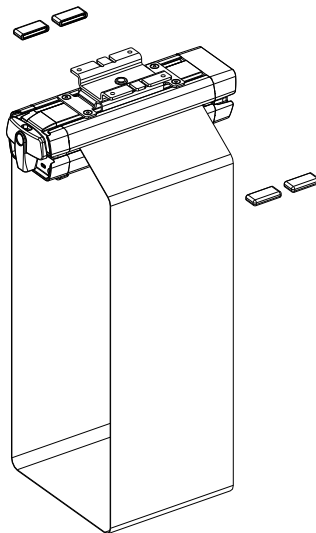


Rotate mounting plate and secure to surface using four #8 x 3/4 screws

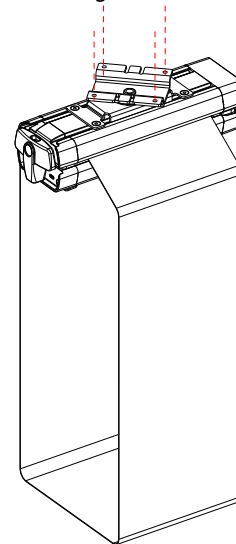


## To secure CPU in the sling:

Remove CPU holder front cap.

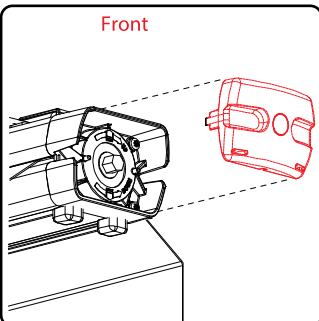

Center CPU in Sling, turning the adjustment key clockwise.  
Adjustment key is located on the backside of the CPU holder.

*\*Remove additional slack once the CPU is continuing to tighten the sling*

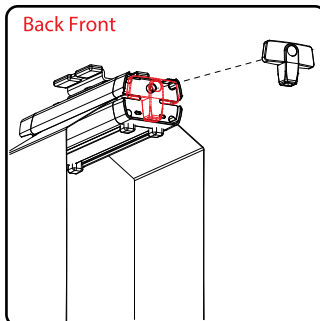

Once CPU is secure, replace CPU cap and adjustment key.

