


# ELVTR01

Elevator CPU Holder

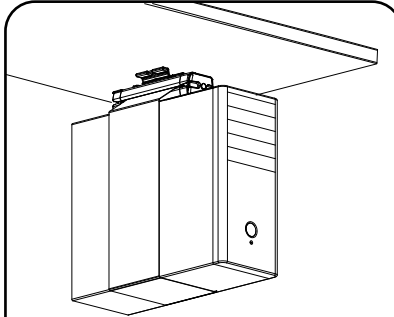

## Required Tools:

Phillips Screw


Driver

Contents:


| QTY | Name           |
|-----|----------------|
| 1   | CPU Holder     |
| 8   | #8 X 3/4 screw |

## To secure CPU Holder to surface:

Remove Plastic covers.

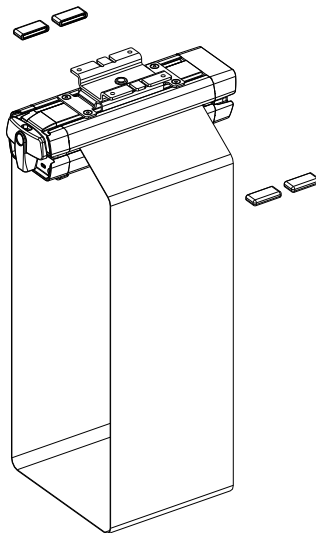

Rotate mounting plate and secure to surface using four #8 x 3/4 screws

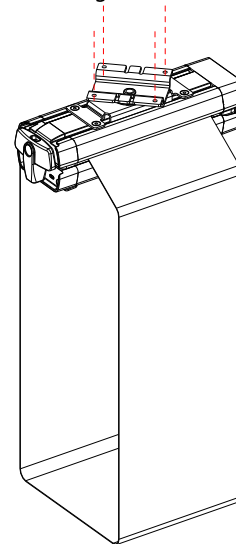

## To secure CPU in the sling:


Remove CPU holder front cap.

Center CPU in Sling, turning the adjustment key clockwise.  
Adjustment key is located on the backside of the CPU holder.

*\*Remove additional slack once the CPU is continuing to tighten the sling*

Once CPU is secure, replace CPU cap and adjustment key.

Front

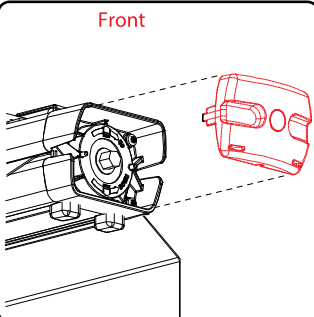

Back Front

